



METROLOGIC INSTRUMENTS INC.

**MetroSelect[®] Single-Line
Configuration Guide**

LOCATIONS

CORPORATE HEADQUARTERS

North America	Metrologic Instruments, Inc. 90 Coles Road Blackwood, NJ 08012-4683	Customer Service: 1-800-ID-METRO Tel: 856-228-8100 Fax: 856-228-6673 Email: info@metrologic.com Internet: www.metrologic.com
----------------------	---	---

EUROPEAN HEADQUARTERS

Germany, Middle East and Africa	Metrologic Instruments GmbH Dornierstrasse 2 82178 Puchheim b. Munich, Germany	Tel: +49 89 89019 0 Fax: +49 89 89019 200 Email: info@europe.metrologic.com Germany Email: info@de.metrologic.com
Spain	Metrologic Eria Ibérica SL Julián Camarillo 29, D-1 Edificio Diapasón 28037 Madrid	Tel: +34 913 272 400 Fax: +39 0 51 6521337 Email: info@es.metrologic.com
Italy	Metrologic Instruments Italia srl Via Emilia 70 40064 Ozzano dell'Emilia (BO)	Tel: +39 0 51 6511978 Fax: +39 0 51 6521337 Email: info@it.metrologic.com
France	Metrologic Eria France SA 69 Rue de la Belle Etoile ZI Paris Nord II, BP 50057 95947 – ROISSY CDG CEDEX	Tel: +33 (0) 1 48.63.78.78 Fax: +33 (0) 1 48.63.24.94 Email: info@fr.metrologic.com
United Kingdom	Metrologic Instruments UK Limited 58 Tempus Business Centre Kingsclere Road, Basingstoke Hampshire RG21 6XG	Tel: +44 (0) 1256 365900 Fax: +44 (0) 1256 365955 Email: info@uk.metrologic.com

ASIA

Singapore	Metrologic Asia (Pte) Ltd No. 8 Kaki Bukit Place 4 th Floor Singapore 416186	Tel: 65-6842-7155 Fax: 65-6842-7166 Email: info@sg.metrologic.com
China	Metro (Suzhou) Technologies Co., Ltd. 221 Xing Hai Street Suzhou Industrial Park Suzhou, China 215021	Tel: 86-512-62572511 Fax: 86-512-62571517 Email: info@cn.metrologic.com
Japan	Metrologic Japan Co., Ltd. Matsunoya Building, 6 Floor 3-14-8 Higashiueno Taitou-Ku, Tokyo 110-0015 Japan	Tel: 81-03-3839-8511 Fax: 81-03-3839-8519 Email: info@jp.metrologic.com

SOUTH AMERICA

Brazil	Metrologic do Brasil Ltda. Rua da Paz 2059 CEP 04713-002 Chácara Santo Antônio São Paulo, SP, Brasil	Tel: 55-11-5182-8226 Fax: 55-11-5182-8315 Email: info@br.metrologic.com
Outside Brazil	Metrologic South America Rua da Paz 2059 CEP 04713-002 Chácara Santo Antônio São Paulo, SP, Brasil	Tel: 55-11-5182-7273 Fax: 55-11-5182-7198 Email: info@sa.metrologic.com

Copyright

© 2002 by Metrologic Instruments, Inc. All rights reserved. No part of this work may be reproduced, transmitted, or stored in any form or by any means without prior written consent, except by reviewer, who may quote brief passages in a review, or provided for in the Copyright Act of 1976.

Products and brand names mentioned in this document are trademarks of their respective companies.

TABLE OF CONTENTS

Introduction	1
Bar Code Configuration Methods	
Single-Code Method	1
Multi-Code Method	2
Need to Start Over?.....	2
Code Types and Decode Rules	
UPC/EAN	3
Code 128.....	4
Code 39.....	5
2 of 5 Codes	7
Codabar.....	9
Code 93.....	10
Code 11.....	10
Telepen	11
Plessey Codes	11
Additional Decode Features	13
Configurable Code Lengths.....	14
Supplements.....	16
RSS Bar Code Implementation.....	23
RSS Limited Bar Codes.....	24
RSS Expanded Bar Codes	25
ISBT Code 128 Implementation	
Programming Mode Bar Codes	26
Concatenation Program Mode Bar Codes.....	27
Pre-Defined Concatenation Program Mode Bar Codes.....	28
User-Defined Concatenation Program Mode Bar Codes.....	29
MS9500 Voyager® & VoyagerCG® Series	
Activation Range	31
CodeGate® Status	31
Laser/Scan Modes	32
Same Symbol Time Outs.....	32

TABLE OF CONTENTS

Communications	34
Scanner Operation	
Configuration Mode Options	36
Scan Buffers	36
Redundant Scans	37
Miscellaneous Decode Features	38
Same Symbol Timeouts	38
LED Options	39
Beeper Options	39
Data Transmission Delays.....	41
Communication Timeout Options	42
Host Scanner Commands	44
Test Modes.....	46
Prefixes/Suffixes	
User Configurable Prefixes, All Data	47
User Configurable ID Characters, Code Specific	48
Standard Prefix Characters	51
Standard Suffix Characters	54
Longitudinal Redundancy Check.....	56
User Configurable Suffixes, All Data	57
Special Formats	58
Code Formatting	
UPC/EAN Formatting	60
Codabar Formatting	63
Code 39 Formatting.....	64
Code 11 Formatting.....	65
Telepen	65
Plessey.....	65
2 of 5 Code Formatting.....	66
RS232	
Parity Features	67

TABLE OF CONTENTS

RS232 (Continued)

Baud Rate	67
Data/Stop Bits	69
Hardware Handshaking	69
Software Handshaking	71
Miscellaneous.....	72

Keyboard

Enable Keyboard Emulation	73
Country/Scan Code Table Selects	73
Keyboard/System Type	75
'Dumb' Terminal Selections.....	76
Special Keyboard Features	77
InterScan Code Delays.....	80
Control Sets.....	80

OCIA

..... **82**

Light Pen Parameters.....

..... **83**

Set Narrow Element Width	84
--------------------------------	----

MS9520/9540-00 Laser Emulation Mode.....

..... **85**

IBM 46xx Configuration

IBM Port	86
IBM Reserve Codes	87

USB.....

..... **88**

Code Bytes Usage

Code Bytes 0-9.....	90
Reserved Codes.....	91
Code Type Table.....	91
ASCII Reference Table.....	92
Extended Key Code Reference Table	96

Miscellaneous Features

Custom Defaults	98
Serial Program Mode.....	99

INTRODUCTION

Your new scanner has been configured at the factory with default settings.

Since many host systems have unique formats and protocol requirements, Metrologic provides a wide range of configurable features that may be selected using this bar code based configuration tool. Once the configuration is completed, the scanner stores the settings in nonvolatile memory (NOVRAM). NOVRAM saves the settings when the power is turned off.

Note: Every bar code with an "*" (asterisk) is a default setting. Bar codes with a "~" (tilde) require the *Multi-Code* configuration method.

BAR CODE CONFIGURATION METHODS

The MetroSelect class of scanners can be bar code configured in two ways: *Single-Code Method* and *Multi-Code Method*.

- ⓘ Please note that the MS6220 Pulsar® can only be configured using the *Multi-Code* Method.
- ⓘ To properly configure an MS9540 scanner, all programming codes must be scanned using the CodeGate® option.

Single-Code Method:

Most features can be enabled or disabled using the Single-Code Method.

1. Power up the scanner.
2. Scan the bar code for the desired feature.
3. Observe a multi-toned, "save setting" beep that indicates the configuration has been saved to NOVRAM.

BAR CODE CONFIGURATION METHODS (CONTINUED)

- ⓘ Please note that the MS6220 Pulsar® can only be configured using the *Multi-Code* Method.
- ⓘ To properly configure an MS9540 scanner, all programming codes must be scanned using the CodeGate® option.

Multi-Code Method:

All features can be enabled or disabled using the *Multi-Code* Method. A feature marked with a “~” requires the *Multi-Code* Method.

1. Power up the scanner.
2. Scan *Enter/Exit Configuration Mode* bar code (3 beeps).
3. Scan bar code for the desired feature (1 beep).

Note: Multiple features can be enabled/disabled before scanning the *enter/exit configuration mode* bar code.

4. Scan *Enter/Exit Configuration Mode* bar code (3 beeps) and save new configuration.

To abort a configuration change, power off the scanner before scanning the Enter/Exit code.

Enter/Exit Configuration Mode



NEED TO START OVER?

Scan the *Recall Default* bar code. This will erase all previous settings and return to the scanner's default communications protocol.

Keyboard Wedge interface scanners will load keyboard wedge defaults.

All other scanners load RS-232 defaults.

Note: Metrologic manufactures custom OEM scanners, which load the OEM's defaults. Page 98 will explain how this affects “Metrologic Defaults.”


Recall Defaults



CODE TYPES AND DECODE RULES

Code Descriptions with an asterisk define a feature that is set as a function of standard factory defaults.


UPC/EAN

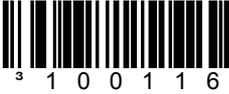

* Enable UPC/EAN.



Disable UPC/EAN.

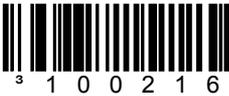

* Enable UPC-A.



Disable UPC-A.



* Enable UPC-E.



Disable UPC-E.



* Enable EAN-13.



Disable EAN-13.

CODE TYPES AND DECODE RULES (CONTINUED)

UPC/EAN (CONTINUED)



* Enable EAN-8.



Disable EAN-8.

CODE 128



* Enable Code 128.



Disable Code 128.



Enable UCC/EAN-128 'J1' Code Formatting.
For Coupon Code 128, see page 19.



* Disable UCC/EAN – 128 'J1' Code formatting.



Ignore <FNC4> Code 128 Characters



* Use <FNC4> to determine Extended ASCII Characters

CODE TYPES AND DECODE RULES (CONTINUED)

CODE 39



* **Enable Code 39.**



Disable Code 39.



Enable MOD 43 Check on Code 39.

When enabled, the scanner only scans Code 39 bar codes that have a valid Modulo 43 check digit.



* **Disable MOD 43 Check on Code 39.**

The scanner will not test Code 39 bar codes for a Modulo 43 check digit.



Enable Full ASCII Code 39.



* **Disable Full ASCII Code 39.**



Enable PARAF (Italian Pharmaceutical Codes) Support. When enabled, the scanner will convert Code 39 bar codes to PARAF format.



* **Disable PARAF Support.** When disabled, the scanner will not convert Code 39 bar codes to PARAF format.

CODE TYPES AND DECODE RULES (CONTINUED)

CODE 39 (CONTINUED)



* Only allow PARAF codes.



Allow Non-PARAF codes.



Enable TRI-OPTIC Code.



* Disable TRI-OPTIC Code.



* Use Standard Code 39 Framing



Try Code 39 Codes without 5 Bar Multiples




Enable ITF/Code 39 Filters



* Disable ITF/Code 39 Filters

CODE TYPES AND DECODE RULES (CONTINUED)

2 OF 5 CODES

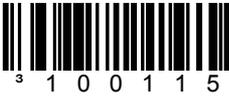

* **Enable Interleaved 2 of 5 (ITF).**



Disable Interleaved 2 of 5 (ITF).



Enable MOD 10 check on ITF.

When enabled, the scanner will only scan Interleaved 2 of 5 (ITF) bar codes that have a Modulo 10 check digit.



* **Disable MOD 10 Check on ITF.** When disabled, the scanner will not test Interleaved 2 of 5 (ITF) bar codes for a Modulo 10 check digit.



Allow ITF Null Characters.



* **Do Not Allow ITF Null Characters**



~ **ITF Symbol Length Lock 1.** To specify a First ITF symbol length lock, scan this bar code and the appropriate code bytes located on pages 90-97. Refer to *Multi-Code Method* on page 2.



~ **ITF Symbol Length Lock 2.** To specify a second ITF symbol length lock, scan this bar code and the appropriate code bytes located on pages 90-97. Refer to *Multi-Code Method* on page 2.

CODE TYPES AND DECODE RULES (CONTINUED)

2 OF 5 CODES (CONTINUED)



~ **ITF Minimum Symbol Length.** To specify a minimum number of ITF characters to be decoded, scan the bytes located on pages 90-97. Refer to *Multi-Code Method* on page 2.



Enable Standard 2 of 5.



* **Disable Standard 2 of 5.**



~ **Standard 2 of 5 Symbol Length.** To specify a minimum number of characters to be decoded, scan this bar code and the appropriate code bytes located on pages 90-97. Refer to *Multi-Code Method* on page 2.



Enable Matrix 2 of 5.



* **Disable Matrix 2 of 5.**



Enable 15 digit Airline 2 of 5.



* **Disable 15 Digit Airline 2 of 5.**

CODE TYPES AND DECODE RULES (CONTINUED)

2 OF 5 CODES (CONTINUED)



Enable 13 Digit Airline 2 of 5.



* Disable 13 Digit Airline 2 of 5.



Enable Hong Kong 2 of 5.



* Disable Hong Kong 2 of 5.

CODABAR



* Enable Codabar.



Disable Codabar.



Enable Dual Field Codabar.



* Disable Dual Field Codabar.

CODE TYPES AND DECODE RULES (CONTINUED)

CODE 93



* Enable Code 93.



Disable Code 93.

CODE 11



Enable Code 11.



* Disable Code 11.



* Look for 1 Code 11 Check Digit



Look for 2 Code 11 Check Digits



* Do Not Do Automatic Check for 2
Code 11 Check Digits



Do Automatic Check for 2 Code 11 Check Digits
if code length is greater than 10 characters.

CODE TYPES AND DECODE RULES (CONTINUED)

TELEPEN



Enable Telepen.



*** Disable Telepen.**



Enable ALPHA Telepen.



*** Disable ALPHA Telepen.**

PLESSEY CODES



Enable MSI Plessey.



*** Disable MSI Plessey.**



*** No MSI Plessey Check Digit.**
Plessey bar codes will not be tested for a check digit.



Enable MSI Plessey MOD 10/10 Check Digit.
Test MSI Plessey bar codes for a 2 digit Modulo 10 check digit.

CODE TYPES AND DECODE RULES (CONTINUED)



* **Enable MSI Plessey Mod 10 Check Digit.**
Test MSI Plessey bar codes for a 1 digit
Modulo 10 check digit.



Enable UK Plessey.



* **Disable UK Plessey.**



Enabled UK Plessey A to X Conversion.



* **Disabled UK Plessey A to X Conversion.**



* **Standard Plessey Stop Characters.**



Accept Bad Plessey Stop Characters.

CODE TYPES AND DECODE RULES (CONTINUED)

ADDITIONAL DECODE FEATURES



**Enable Double Border
Required/Large Intercharacter Space.**



*** Disable Double Border
Required/Large Intercharacter Space.**



Enable Small Border Required



*** Disable Small Border**



~ Minimum Symbol Length.

Single-line default is 3. Combine this code with the proper Code Bytes, to specify the minimum number of characters in all non-UPC/EAN bar codes. Refer to the *Multi-Code Method* on page 2.



~ Symbol Length Lock.

This code combined with the proper Code Bytes, locks the bar code's length into place. Refer to the *Multi-Code Method* on page 2.



**Enable Modulus 8 Filter on Bar & Space
Counts**



*** Disable Modulus 8 Filter on Bar & Space
Counts**

CODE TYPES AND DECODE RULES (CONTINUED)

CONFIGURABLE CODE LENGTHS

There are seven bar code lock lengths available. Specific code types can be assigned to a lock length. Refer to the *Multi-Code Method* on page 2.

While in programming mode:

1. Scan the code *length* lock #1 bar code
2. Scan the three Code Bytes that represent the code length.
Refer to Code Bytes on page 90.
3. Scan the matching code *type* lock #1 bar code
4. Scan the three code bytes that represent the code type.
Refer to the Code Type Table on page 91.

This process can be repeated for lock lengths 2 through 7.



~ Code Length Lock #1.



~ Code Type Lock #1.



~ Code Length Lock #2.



~ Code Type Lock #2.



~ Code Length Lock #3



~ Code Type Lock #3.

CODE TYPES AND DECODE RULES (CONTINUED)

CONFIGURABLE CODE LENGTHS (CONTINUED)



~ Code Length Lock #4.



~ Code Type Lock #4.



~ Code Length Lock #5.



~ Code Type Lock #5.



~ Code Length Lock #6.



~ Code Type Lock #6.



~ Code Length Lock #7.



~ Code Type Lock #7.

SUPPLEMENTS



Enable Two Digit Supplements.



*** Disable Two Digit Supplements.**



*** Enable Two Digit Redundancy.**

The scanner will scan the bar code plus the 2 digit add on twice before accepting data.



Disable Two Digit Redundancy.

Does not implement the 2 digit redundancy feature.



Enable Five Digit Supplements.



*** Disable Five Digit Supplements.**



Enable Five Digit Redundancy.

The scanner will scan the bar code plus the 5 digit add on twice before accepting data.



*** Disable Five Digit Redundancy.**

Does not implement the 5 digit redundancy feature.

SUPPLEMENTS (CONTINUED)



Supplements are Required.

All UPC/EAN labels that are scanned must have a supplement.



*** Supplements are not Required.**

All UPC/EAN labels do not require a supplement to be scanned.



Enable Remote Supplemental Requirement.

Not supported – MS9500 & MS6200.



*** Disable Remote Supplemental Requirement.**

Not supported – MS9500 & MS6200.



Enable Bookland (978) Supplement Requirement.



*** Disable Bookland (978) Supplement Requirement.**



Enable 977 (2 digit) Supplemental Requirement.

The scanner will require a 2 digit supplement to be scanned whenever an EAN-13 code begins with 977.



*** Disable 977 (2 digit) Supplemental Requirement.**

The scanner will not require a 2 digit supplement be scanned whenever an EAN-13 code begins with 977.

SUPPLEMENTS (CONTINUED)



Enable 378/379 French Supplement Requirement.



*** Disable 378/379 French Supplemental Requirement.**



Enable 414/419 German Bookland Supplemental Requirement.



*** Disable 414/419 German Bookland Supplemental Requirement.**



Enable 434/439 German Supplemental Requirement.



*** Disable 434/439 German Supplemental Requirement.**



Enable #System 2 Requires Supplements.



*** Disable #System 2 Requires Supplements.**

SUPPLEMENTS (CONTINUED)



Enable UPC # System 5 Requires Supplements.



*** Disable UPC # System 5 Requires Supplements.**



*** Enable 2 Digit Supplements with 37x, 43x, or UPC # System 5.**



Disable 2 Digit Supplements with 37x, 43x, or UPC # System 5.



*** Enable 5 Digit Supplements with 37x, 43x, or UPC # System 5.**



Disable 5 Digit Supplements with 37x, 43x, or UPC # System 5.



Enable Coupon Code 128.



*** Disable Coupon Code 128.**

SUPPLEMENTS (CONTINUED)



Enable Code 128 'JC1' Extended Code Format.
Scanner transmits an 'JC1' at the beginning of the Code 128 portion of the coupon code.



*** Disable Code 128 'JC1' Extended Code Format.**
When disabled scanner will not transmit on 'JC1' at the beginning of the Code 128 portion of the coupon code.



Enable Code 128 Group Separators.
"GS" (1DH) character will be transmitted with coupon Code 128 codes.



*** Disable Code 128 Group Separators.**
"GS" (1DH) character will not be transmitted with coupon Code 128 codes.



400 msec to Find Supplemental.
With this option, the scanner will allot 400 milliseconds to "find" an add on after a main UPC/EAN bar code has been scanned.



200 msec to Find Supplemental.
With this option the scanner will allot 200 milliseconds to "find" an add on after a main UPC/EAN bar code has been scanned.



*** 100 msec to Find Supplemental.**
With this option, the scanner will allot 100 milliseconds to "find" an add on after a main UPC/EAN bar code has been scanned.

SUPPLEMENTS (CONTINUED)



Enable Code ID's with Supplements.



*** Disable Code ID's with Supplements.**



*** Beep Once on Supplements.**



Beep Twice on Supplements.



Enable ISBN Check Digit Transmission.
Not available with all models.



Disable ISBN Check Digit Transmission.



Enable Bookland to ISBN Conversion.
Not available with all models



*** Disable Bookland to ISBN Conversion.**

SUPPLEMENTS (CONTINUED)



Enable ISBN Re-Formatting.



*** Disable ISBN Re-Formatting.**



Disable Supplementals when CodeGate[®] Button is Pressed.

Available for MS9540 scanners only.
Requires standard Code Gate be inactive in and out of stand.



*** CodeGate does not affect supplemental scanning.**

Available for MS9540 scanners only.

RSS BAR CODE IMPLEMENTATION

Metrologic's MS9520 Voyager® and MS9540 VoyagerCG® laser scanners now have the ability to decode RSS bar codes. This software addendum enables either unit with software #14810 and higher to be programmed to scan RSS type codes as it would any other symbology.

Manufacturers Note:

XT keyboard will no longer be supported in standard software releases with software #14810 or higher. If XT keyboard is needed for your application, software #14806 or lower is required, contact a Metrologic customer service representative at 1-800-ID-METRO for further assistance.

When scanning RSS bar codes, it is recommended that double border requirements be enabled because of the large spaces often found in RSS symbologies.

Double Border Required



Enable RSS 14



* Disable RSS 14



* Transmit RSS 14 Check Digit



Do Not Transmit RSS 14 Check Digit



* Transmit RSS 14 Application ID



Do Not Transmit RSS 14 Application ID



Application Identifier "01"
is transmitted by default.

RSS BAR CODE IMPLEMENTATION (CONTINUED)

*** Transmit RSS 14
Symbology ID**



**Do Not Transmit RSS 14
Symbology**



Symbology Identifier “je0”
is transmitted by default.

RSS LIMITED BAR CODES

Enable RSS Limited



*** Disable RSS Limited**



*** Transmit RSS
Limited CD**



**Do Not Transmit
RSS Limited CD**



*** Transmit RSS Limited
Application ID**



**Do Not Transmit RSS
Limited Application ID**



Application identifier “01”
is transmitted by default.

RSS BAR CODE IMPLEMENTATION (CONTINUED)

* Transmit RSS Limited Symbology ID



Symbology identifier “]e0” is transmitted by Default

Do Not Transmit RSS Limited Symbology ID



RSS EXPANDED BAR CODES

Enable RSS Expanded



* Disable RSS Expanded



* Transmit RSS Expanded Symbol ID



Symbology identifier “]e0” is transmitted by Default

Do Not Transmit RSS Expanded Symbol ID



ISBT CODE 128 IMPLEMENTATION

PROGRAMMING-MODE BAR CODES

Enable ISBT Code 128



Disable ISBT Code 128



These bar codes are used to Enable/Disable a Special Transmit mode as outlined in section 3.5.2 of the ISBT-128 Specification. This output method allows the user to confirm independently the accuracy of the Code-128 check digit.

Enable ISBT Special Transmit



Disable ISBT Special Transmit



These bar codes can be used to disable the transmission of the ISBT Code 128 data identifiers. When this option is selected, the first two data characters are removed from the data stream (ID characters) unless the ISBT bar code scanned contains the Donation Identification Number identifiers. In this instance only the first ID character is removed from the Donation ID Number. The second is regarded as normal data.

Don't Transmit ISBT ID's



* Transmit ISBT Identifiers



These bar codes are used to convert and transmit the Mode 37,2 check digit from the flag digits of the Donation Identification Number provided the check digit is contained in the flag digits. Transmission of the Donation Identification number will be the same except for the last two digits, which are converted into a single check sum character.

Convert Flag Digits to Mod 37, 2 CD



* Normal Flag Digit Transmission



ISBT CODE 128 IMPLEMENTATION

CONCATENATION PROGRAM MODE BAR CODES

Supported by the MS9500 series only.

The following bar codes are used to program variable time requirements used to find the 2nd bar code of the ISBT concatenation sequence.

100 msec to Find Concatenation, Sequence



500 msec to Find Concatenation, Sequence



200 msec to Find Concatenation, Sequence



600 msec to Find Concatenation, Sequence



300 msec to Find Concatenation, Sequence



700 msec to Find Concatenation, Sequence



400 msec to Find Concatenation, Sequence



ISBT CODE 128 IMPLEMENTATION

PRE-DEFINED CONCATENATION PROGRAM MODE BAR CODES

Supported by the MS9500 series only.

The first two barcodes can be used to Enable/Disable pre-defined concatenation sequences. The remaining bar codes enable the specific enable concatenation sequences and are not needed to enable concatenation. They can be used to disable any selected pre-defined concatenation sequence as well as re-enable it.

Enable Pre-Defined Sequence



Disable Pre-Defined Sequence



Donation Identification Number + AB0/Rh (D) Blood Groups

=á + =% Concatenation



Donation Identification Number + Donor Identification Number

=á + & Concatenation



Donation Identification Number + Confidential Unit Exclusion Status

=á + &! Concatenation



Product Code + Expiration Date (Form 1)

=< + => Concatenation



Product Code + Expiration Date (Form 2)

=< + &> Concatenation



Product Code + Expiration Date (Form 3)

&< + => Concatenation



ISBT CODE 128 IMPLEMENTATION

PRE-DEFINED CONCATENATION PROGRAM MODE BAR CODES (CONTINUED)

Supported by the MS9500 series only.

Product Code + Expiration Date (Form 4)

&< + &> Concatenation



USER-DEFINED CONCATENATION PROGRAM MODE BAR CODES

Supported by the MS9500 series only.

The first two bar codes can be used to Enable and Disable User-Defined concatenation sequences. The remaining bar codes are used to enter the user-defined identifiers used in the concatenation sequence. These bar codes require that the user enter program mode first. Then, after scanning the appropriate code, follow the rules for using Code Bytes to enter the desired identifiers.

Enable

User-Defined Sequences



Disable

User-Defined Sequences



1st Left Identifier



2nd Left Identifier



1st Right Identifier



2nd Right Identifier



ISBT CODE 128 IMPLEMENTATION

Supported by the MS9500 series only.

The following example demonstrates how to program the User-Defined ISBT identifiers:

Assume the left-hand identifiers are the ISBT defined donation identification number: “=G”; and the right hand identifiers are country specific identifiers “&a”.

1. Scan the ENTER/EXIT programming mode bar code.
2. Scan the 1st Left Identifier programming mode bar code.
3. Scan (Code Byte 0) + (Code Byte 6) + (Code Byte 1).
4. Scan the 2nd Left Identifier programming mode bar code.
5. Scan (Code Byte 0) + (Code Byte 7) + (Code Byte 1).
6. Scan the 1st Right Identifier programming mode bar code.
7. Scan (Code Byte 0) + (Code Byte 3) + (Code Byte 8).
8. Scan the 2nd Right Identifier programming mode bar code.
9. Scan (Code Byte 0) + (Code Byte 9) + (Code Byte 7).
10. Scan the Enable User-Defined Sequence bar Code.
11. Scan the Enable ISBT bar code.
12. Scan the ENTER/EXIT programming mode bar code.

The scanner is now programmed with the appropriate identifiers. Since both ISBT and User-defined Concatenation are enabled, ISBT 128 bar codes scanned successively that contain these identifiers will be concatenated.

An alternate method of the type found in section 4.8.1 of the ISBT specifications can be used for programming user-defined concatenation sequences. Using the previous example, the identifiers can be programmed into a single programming mode bar code. The following bar codes can be used to enable and disable the user-defined concatenation.

Enable (Left, =G) + (Right, &a)



Disable (Left, =G) + (Right, &a)



These programming-mode bar codes differ from Metrologic's normal set of programming mode bar codes and can only be used in single-code programming mode. In *Multi-Code* program mode, these bar codes are not recognized.

Two forms of concatenation can be enabled at any given time – One Pre-defined sequence and the User-defined sequence. Code selects and ISBT Code-128 concatenation cannot be used simultaneously. Both functions use the same internal resources so they must remain mutually exclusive.

MS9500 VOYAGER® & VOYAGERCG® SERIES

ACTIVATION RANGE

Use these bar codes to select infrared (IR sensor activation range for sensing when objects are placed in the scan field.



* Long Range in Stand.



Short Range in Stand.



* Long Range out of Stand.



Short Range out of Stand.

CODEGATE® STATUS

Use the following to control button functions.

Note: The following functions are not supported by all versions of the MS5145.



CodeGate Active in the Stand.



* CodeGate Inactive in the Stand.



* CodeGate Active Out of Stand.

MS9500 VOYAGER® & VOYAGERCG® SERIES

CODEGATE® STATUS (CONTINUED)

Note: The following functions are not supported by all versions of the MS5145.



CodeGate Inactive Out of Stand

LASER/SCAN MODES



*** Normal Scan.**

Laser turns on after the IR senses a bar code.
The laser remains on for approximately 3 to 10 seconds.



Blinky Scan.

Laser turns on after the IR senses a bar code.
The laser will blink on/off for approximately 60 seconds.



Continuous Blinky Scan. The laser blinks continuously. The IR is inactive.



Custom (One Shot) Scan.

Laser turns on after a good decode.

SAME SYMBOL TIME OUTS



No Same Symbol Time Out.



1000 msec Same Symbol Time Out.

MS9500 VOYAGER® & VOYAGERCG® SERIES

SAME SYMBOL TIME OUTS (CONTINUED)



* 875 msec Same Symbol Time Out.



750 msec Same Symbol Time Out.



625 msec Same Symbol Time Out.



500 msec Same Symbol Time Out.



375 msec Same Symbol Time Out.



250 msec Same Symbol Time Out.



Infinite Same Symbol Time Out.

COMMUNICATIONS



Enable Light Pen/Wand Communication.
Use this option if scanner should be used in place of a light pen.



* **Enable RS-232.**
When this option is enabled, the scanner will work with RS-232 +/- 12V serial output.



Load Keyboard Wedge Defaults.
Scan this code before selecting Normal or Stand Alone Wedge Mode. Goes into normal keyboard wedge defaults.



Enable Stand-Alone Keyboard Scanner.
Allows scanner to be used without an external keyboard.



Enable Keyboard Wedge Emulation.
Select if the scanner provides keyboard emulation by converting the scanned bar code data to the PC keyboard scan code equivalent.



Load OCIA Defaults.
Scan this code before selecting Enable OCIA output.



Enable OCIA Output.
Select this option if the communications requirement is on Optically Coupled Interface Adapter (OCIA). This is a docked (by the host) serial interface.

COMMUNICATIONS (CONTINUED)



Load IBM 46xx Defaults.



Enable IBM 46xx Communication.

Select this option for IBM 46xx SIOC/RS485 communications. Not all scanners support this interface. The correct interface board is required.



Enable No Communication Mode.

Select this option if the scanner does not interface with the host device.



Reserved.



Reserved.

SCANNER OPERATION

CONFIGURATION MODE OPTIONS



Allow Configuration Mode on Power-up.
Scanner can only enter MetroSet mode before any bar codes are scanned.



* **Allow Configuration Mode Anytime.**
Allow MetroSet configuration at any time.



Allow configuration labels on Power-up.
Once a product bar code is scanned after power-up, the scanner will not accept configuration bar codes.



* **Allow Configuration Labels Anytime.**
Allows scanning of configuration bar codes at any time.

SCAN BUFFERS



* **1 Scan Buffer.**
When enabled, the scanner will scan one bar code in the scan field and not scan again until the bar code is removed from the scan field for the duration of the same symbol time out.



2 Scan Buffers.
When enabled, the scanner will scan 2 bar codes in the scan field one time each. These 2 bar codes will not be scanned again and until they are removed from the scan field for the duration of the same symbol time out.



3 Scan Buffers.
Same function as 2 Scan Buffers, but 3 bar codes are in the scan field.



4 Scan Buffers.
Same function as 2 Scan Buffers, but 4 bar codes are in the scan field.

SCANNER OPERATION (CONTINUED)

REDUNDANT SCANS



*** 0 Redundant Scans.**

Requires 1 good decode for a “good scan”.



1 Redundant Scan.

Requires 2 consecutive decodes of the same bar code data for a “good scan”.



2 Redundant Scans.

Requires 3 consecutive decodes of the same bar code data for a “good scan”.



3 Redundant Scans.

Requires 4 consecutive decodes of the same bar code data for a “good scan”.



4 Redundant Scans.

Requires 5 consecutive decodes of the same bar code for a “good scan”.



5 Redundant Scans.

Requires 6 consecutive decodes of the same bar code for a “good scan”.



6 Redundant Scans.

Requires 7 consecutive decodes of the same bar code for a “good scan”.



7 Redundant Scans.

Requires 8 consecutive decodes of the same bar code for a “good scan”.

SCANNER OPERATION (CONTINUED)

MISCELLANEOUS DECODE FEATURES



* **Optional Same Symbol Check.**

Requires 1 different character between successive bar codes to consider the bar code "new".



Normal Same Symbol Check.

Requires 3 different characters between successive bar codes to consider the bar code "new".

SAME SYMBOL TIMEOUTS

The length of time before a bar code can be rescanned after it is removed from the scan field is user-configurable in increments of 50 msecs to 6350 msecs (6.35 sec).

If using an MS9500 or IS4720, please go to Page 32.



~Variable Same Symbol Time Out

In configuration mode, scan this bar code followed by the code byte sequence to set the same symbol time out duration. See page 90 for code bytes.

Not supported for the MS9500s or IS4720s, refer to page 32.



No Same Symbol Time Out.



Infinite Same Symbol Time Out.

When selected, the scanner will not repetitively scan the same bar code. This option overrides the symbol rescan time-outs.

SCANNER OPERATION (CONTINUED)

LED OPTIONS



Flash Green LED if Rescan Allowed.
This indicates same symbol timeout has elapsed.



*** Do Not Flash Green LED if Rescan Allowed.**



Reverse LED Functions.
Red = Laser On
Green = Good Read



*** Normal LED Functions.**
Green = Laser On
Red = Good Read

BEEPER OPTIONS



*** Normal Tone.**



Optional Tone 1.



Optional Tone 2.



Optional Tone 3.

SCANNER OPERATION (CONTINUED)

BEEPER OPTIONS (CONTINUED)



Optional tone 4.



Optional Tone 5.



Optional tone 6.



No Beep.



* Beep Once on Supplements.



Beep Twice on Supplements.



Enable Fast Beep



* Disable Fast Beep.

SCANNER OPERATION (CONTINUED)

BEEPER OPTIONS (CONTINUED)



Beep on BEL Command.

The scanner beeps when it receives a BEL character from the host. If a number is sent within 200 msec before the BEL character, the scanner will beep that number of times



*** Ignore BEL Command.**



Enable Light Pen Toggle During Beep.

When enabled, the scanner beeps and toggles the light pen data line on a successful decode. This drives a good read indicator.



*** Disable Light Pen Toggle During Beep.**

DATA TRANSMISSION DELAYS

Use these codes to select the amount of delay between sending data characters from the scanner to the host. This helps prevent the scanner from overflowing host-input buffers.



*** 1 msec Intercharacter Delay.**



10 msec Intercharacter Delay.



25 msec Intercharacter Delay.

SCANNER OPERATION (CONTINUED)

DATA TRANSMISSION DELAYS (CONTINUED)



~ Variable msec Intercharacter Delay.

Scan this bar code and a sequence of code bytes (pages 90-97) to set the delay between characters sent to the host system. (Range from 1 to 255 msec.)



No Intercharacter Delay.



~ Variable Inter-Record Delay.



Turn Off Laser During Inter-Record Delay.



* Leave Laser On During Inter-Record Delay.

COMMUNICATION TIMEOUT OPTIONS



Enable Communications Timeouts.



* Disable Communications Timeouts.

SCANNER OPERATION (CONTINUED)

COMMUNICATION TIMEOUT OPTIONS (CONTINUED)



*** Beep Before Transmit.**

Scanner will beep after each label is transmitted.



Beep After Transmit.

Scanner will beep after each label is transmitted.



~ Variable Communications Time Out



*** Default Communications Time Out (2 secs).**



Short communications Time Out (1 secs).



Long communications Time Out (4 secs).



Three Beeps on Time Out.



*** No Beeps on Time Out.**

SCANNER OPERATION (CONTINUED)

COMMUNICATION TIMEOUT OPTIONS (CONTINUED)



Razzberry Tone on Time Out.



*** No Razzberry Tone on Time Out.**

HOST SCANNER COMMANDS



Enable "D/E" Disable Command.

When this option is chosen, the scanner will disable scanning after it receives an ASCII "D" from the host device. It will enable scanning when it receives an ASCII "E".



*** Disable "D/E" Disable.**

Do not monitor D/E commands.



Enable Z/R type D/E Simulation.

When this option is chosen, the scanner will disable scanning after it receives an ASCII "Z" from the host device. It will enable scanning when it receives an ASCII "R".



*** No "Z/R" Type "D/E" Simulation.**

Do not monitor Z/R commands.



Enable "F/L" Laser Command.

When enabled, the scanner will turn off the laser after the scanner receives on ASCII "F" character. The laser will turn on after it receives an ASCII "L" character.



*** Disable "F/L" Laser Command.**

Do not monitor "F/L" commands.

SCANNER OPERATION (CONTINUED)

HOST SCANNER COMMANDS (CONTINUED)



Use DTR Scan Disable

When enabled, the scanner will monitor the DTR input to determine if scanning should be allowed. A +12V “active” level enables decoding. A -12V “inactive” level disables decoding.



* Do not use DTR Scan Disable.

Do not monitor the DTR input.



Activate DC2 Character.

When enabled, scanning will be initiated with the receipt of a DC2 character (^R, 124).



* Do Not Activate on DC2 Character.



Transmit “METROLOGIC” with receipt of an “I” (49H) via RS232.



* Don't Transmit “METROLOGIC” with receipt of an “I” (49H) via RS232.



Transmit scanner ID byte with receipt of an “i” (69H) via RS232.

The ID byte is transmitted as 3 bytes i.e. “0”, “0”, “1”.



* Don't Transmit scanner ID byte with receipt of an “i” (69H) via RS232.

SCANNER OPERATION (CONTINUED)

HOST SCANNER COMMANDS (CONTINUED)



Transmit "NO READ" if DC2 Activated.



* Do Not Transmit "NO READ" if DC2 Activated.



No Green LED During "NO READ" Xmit.



* Green LED During "NO READ" Xmit.

TEST MODES



Scanability ON.

This option enters scanability test mode.

Do not enable unless instructed by a Metrologic representative.



* **Scanability OFF.**



Scan Count Mode ON.

When enabled the scanner will enter scan count test mode and the scanner's firmware number will transmit to the host. ***Do not enable unless instructed by a Metrologic representative.***



* **Scan Count Mode OFF.**

PREFIXES/SUFFIXES

Note: Scan *Enter Configuration Mode* bar code before trying to set this feature. Please refer to *Multi-Code Method* on page 2.

USER CONFIGURABLE PREFIXES, ALL DATA



~ Configurable Prefix Character #1.

When this option is chosen, a prefix ID can be added and assigned for data transmission. Use this code with a 3 code byte sequence represents the desired character (see Pages 90-97 for Code Bytes).



~ Configurable Prefix Character #2.

Assigns a second configurable prefix character.



~ Configurable Prefix Character #3.

Assigns a third configurable prefix character.



~ Configurable Prefix Character #4.

Assigns a fourth configurable prefix character.



~ Configurable Prefix Character #5.

Assigns a fifth configurable prefix character.



~ Configurable Prefix Character #6.

Assigns a sixth configurable prefix character.



~ Configurable Prefix Character #7.

Assigns a seventh configurable prefix character.

PREFIXES/SUFFIXES (CONTINUED)

USER CONFIGURABLE PREFIXES, ALL DATA (CONTINUED)



~ Configurable Prefix #8.

Assigns an eighth configurable prefix character.



~ Configurable Prefix Character #9.

Assigns a ninth configurable prefix character.



~ Configurable Prefix Character #10.

Assigns a tenth configurable prefix character.



*** Clear All User Configurable Prefixes.**

USER CONFIGURABLE ID CHARACTERS, CODE SPECIFIC



*** Use Configurable Code ID Bytes as Prefixes.**

User configured, code specific ID bytes are transmitted before the data. If using prefixes, user configured suffixes can not be used.



Use Configurable Code ID Bytes as Suffixes.

User configured, code specific ID bytes are transmitted after the data. If using suffixes, user configured prefixes can not be used.

PREFIXES/SUFFIXES (CONTINUED)

USER CONFIGURABLE ID CHARACTERS, CODE SPECIFIC (CONTINUED)

‡ Enter configuration mode then scan this bar code followed by the 3 code byte bar codes (pages 90-97) that represent a unique ID character to be associated with this bar code type.



~ Configurable UPC-A ID. ‡



~ Configurable UPC-E ID. ‡



~ Configurable EAN-8 ID. ‡



~ Configurable EAN-13 ID. ‡



~ Configurable Code 39 ID. ‡



~ Configurable Code 128 ID. ‡



~ Configurable Code 93 ID. ‡



~ Configurable Code 11 ID. ‡

PREFIXES/SUFFIXES (CONTINUED)

USER CONFIGURABLE ID CHARACTERS, CODE SPECIFIC (CONTINUED)

‡ Enter configuration mode then scan this bar code followed by the 3 code byte bar codes (pages 90-97) that represent a unique ID character to be associated with this bar code type.



~ Configurable Telepen ID. ‡



~ Configurable TRI-OPTIC ID. ‡



~ Configurable Standard 2 of 5 ID. ‡



~ Configurable Interleaved 2 of 5 ID. ‡



~ Configurable Matrix 2 of 5 ID. ‡



~ Configurable Airline 2 of 5 ID. ‡



~ Configurable MSI Plessey ID. ‡



~ Configurable UK Plessey ID. ‡

PREFIXES/SUFFIXES (CONTINUED)

USER CONFIGURABLE ID CHARACTERS, CODE SPECIFIC (CONTINUED)



~ Configurable Codabar ID.

Enter configuration mode then scan this bar code followed by the 3 code byte bar codes (pages 90-97) that represent a unique ID character to be associated with this bar code type.



*** Clear All Configurable Code Specific ID's.**

Clears all unique ID characters previously identified.

STANDARD PREFIX CHARACTERS



Enable STX Prefix.

The scanner will transmit a Start of TeXt (ASCII 02H) before each bar code.



*** Disable STX Prefix.**

The scanner will not transmit a Start of TeXt (ASCII 02H) before each bar code.



Enable Rochford-Thomson Mode.



*** Disable Rochford-Thomson Mode.**



Enable AIM ID Characters.



*** Disable AIM ID Characters.**

PREFIXES/SUFFIXES (CONTINUED)

STANDARD PREFIX CHARACTERS (CONTINUED)



Enable UPC Prefix ID.

The scanner will transmit a prefix before any UPC/EAN bar code. The prefixes are A (UPC-A), E0 (UPC-E), F (EAN-13, and FF (EAN-8).



*** Disable UPC Prefix ID.**

Do not send prefix ID Characters with UPC/ EAN codes.



Enable NCR Prefix ID.

When enabled, the scanner will transmit a prefix before the following code types. The prefixes are as follows: A (UPC-A), E0 (UPC-E), FF (EAN-8), F (EAN 13), B1 (Code 39, B2 (ITF), B3 (Code 128 and other codes).



*** Disable NCR Prefix ID.**



Enable Nixdorf ID Characters.

When enabled, this option transmits code identities before each bar code for many Siemen/Nixdorf registers.



*** Disable Nixdorf ID Characters.**

This bar code will not transmit Siemens/Nixdorf code identities.



Enable SANYO ID Characters.

Transmit Sanyo ID Characters.



*** Disable SANYO ID Characters.**

Do not transmit Sanyo ID Characters.

PREFIXES/SUFFIXES (CONTINUED)

STANDARD PREFIX CHARACTERS (CONTINUED)



Enable Manufacturer ID Prefix.

Transmits "METROLOGIC" before all bar code data to identify the scanner as Metrologic scanner.



*** Disable Manufacturer ID Prefix.**

Will not transmit the identification string.



Enable "C" Prefix



*** Disable "C" Prefix.**



Enable "\$" Prefix ID for UPC/EAN.



*** Disable "\$" Prefix ID for UPC/EAN.**



Enable Tab Prefix.

The Scanner will transmit a TAB (ASCII 09H) before each bar code.



*** Disable Tab Prefix.**

Will not transmit a TAB.

PREFIXES/SUFFIXES (CONTINUED)

STANDARD PREFIX CHARACTERS (CONTINUED)



Enable SNI Beetle Mode.



*** Disable SNI Beetle Mode.**



Enable Cipher 1021 IDs.



*** Disable Cipher 1021 IDs.**

STANDARD SUFFIX CHARACTERS



*** Enable CR Suffix.**
When enabled, the scanner transmits a Carriage Return after each bar code.



Disable CR Suffix.
The scanner will not transmit a Carriage Return after each bar code.



*** Enable LF Suffix.**
When enabled, the scanner transmits a Line Feed after each bar code.

Note: Disabled when keyboard wedge defaults are loaded.

PREFIXES/SUFFIXES (CONTINUED)

STANDARD SUFFIX CHARACTERS (CONTINUED)



Disable LF Suffix.

The scanner will not transmit a Line Feed after each bar code.



Enable Tab Suffix.

When enabled, the scanner will transmit a TAB (ASCII 09H) after each bar code.



*** Disable Tab Suffix.**

Will not transmit TAB (ASCII 09H) after each bar code.



Enable ETX Suffix.

When enabled, the scanner will transmit End of TeXt (ASCII 03H) after the bar code date.



*** Disable ETX Suffix.**

When disabled, the scanner will not transmit End of TeXt (ASCII 03H).



Enable UPC Suffix ID.

When enabled, the scanner will transmit a suffix after any UPC/EAN bar code. The suffixes are A (UPC-A), E (UPC-E), F (EAN-13) and F (EAN-8).



*** Disable UPC Suffix ID.**

Will not transmit a suffix after UPC/EAN bar codes.

PREFIXES/SUFFIXES (CONTINUED)

LONGITUDINAL REDUNDANCY CHECK

A Longitudinal Redundancy Check (LRC) is an error checking character that is calculated across a sequence of data characters. It is determined by eXclusive ORing (XOR) the characters to be checked, starting with an initial value of 00H.

The result, an “LRC byte” is then transmitted following the data stream and used by the receiving computer to determine if the information was received correctly. In the scanner’s case, XOR is performed prior to adding parity bits.

When the LRC is enabled, the scanner defaults to starting the LRC on the second byte of information transmitted. Optionally, the calculation can start on the first byte transmitted.



Enable Transmit of LRC Calculation.

With this option, the scanner outputs an LRC check character after the bar code.



*** Disable Transmit of LRC Calculation.**

Will not output an LRC (check character) after the bar code.



Start LRC on Second Byte.

The scanner will calculate the LRC check digit starting with the second character.



*** Start LRC on First Byte.**

The scanner will calculate the LRC check digit starting with the first character.

PREFIXES/SUFFIXES (CONTINUED)

USER CONFIGURABLE SUFFIXES, ALL DATA

Note: Scan the *Enter/Exit Configuration mode* code before trying to set this feature. Refer to *Multi-Code Method* on page 2.



~ Configurable Suffix Character #1.

When chosen, a suffix ID can be added and assigned for data transmission. Use this code with a 3 code byte sequence (pages 90-97) that represents the desired character.



~ Configurable Suffix Character #2.

Assigns a second configurable suffix character.



~ Configurable Suffix Character #3.

Assigns a third configurable suffix character.



~ Configurable Suffix Character #4.

Assigns a fourth configurable suffix character.



~ Configurable Suffix Character #5.

Assigns a fifth configurable suffix character.



~ Configurable Suffix Character #6.

Assigns a sixth configurable suffix character.



~ Configurable Suffix Character #7.

Assigns a seventh configurable suffix character.

PREFIXES/SUFFIXES (CONTINUED)

USER CONFIGURABLE SUFFIXES, ALL DATA (CONTINUED)



~ **Configured Suffix Character #8**
Assigns an eighth configurable suffix character.



~ **Configurable Suffix Character #9.**
Assigns a ninth configurable suffix character.



~ **Configurable Suffix Character #10.**
Assigns a tenth configurable suffix character.



* **Clear All User Configurable Suffixes.**

SPECIAL FORMATS



Enable SINEKO Mode.



* **Disable SINEKO Mode.**



Enable Newcode formatting Mode A.

PREFIXES/SUFFIXES (CONFIGURED)



* Disable Newcode Formatting Mode A.



Enable Newcode Formatting Mode B.



* Disable Newcode Formatting Mode B.



Remove all leading zero's.



* Don't remove leading zero's.



Enable MS951 CAPS Lock.



* Disable MS951 CAPS Lock

CODE FORMATTING

UPC/EAN FORMATTING



* Transmit UPC-A Check Digit.



Do Not Transmit UPC-A Check Digit.



Transmit UPC-E Check Digit.



* Do Not Transmit UPC-E Check Digit.



Expand UPC-E to 12 Digits.

Expand UPC-E bar codes to the 12 digit equivalent, UPC-A bar codes.



* **Do Not Expand UPC-E to 12 Digits.**

Do not expand UPC-E to the 12 digit equivalent, UPC-A bar codes.



Enable GTIN Formatting



* **Disable GTIN Formatting**

CODE FORMATTING (CONTINUED)

UPC/EAN FORMATTING (CONTINUED)



Convert UPC-A to EAN-13.

With this option, the scanner converts UPC-A to EAN-13 by transmitting a leading zero before the bar code.



*** Do Not Convert UPC-A to EAN-13.**

With this option, the scanner will not convert UPC-A to EAN-13.



Transmit Lead Zero on UPC-E.

When chosen, this option will transmit a zero before each UPC-E bar code.



*** Do Not Transmit Lead Zero on UPC-E.**

This option will not transmit a zero before each UPC-E bar code.



Convert EAN-8 to EAN-13.

When chosen, the scanner will transmit five zeros before the bar code to convert EAN-8 to EAN-13



*** Do Not Convert EAN-8 to EAN-13.**



*** Transmit UPC-A Number System.**



Do Not Transmit UPC-A Number System.

CODE FORMATTING (CONTINUED)

UPC/EAN FORMATTING (CONTINUED)



* Transmit UPC-A MFR#.



Do Not Transmit UPC-A MFR#.



* Transmit UPC-A ITEM#.



Do Not Transmit UPC-a ITEM#.



* Transmit EAN-8 Check Digit.



Do Not Transmit EAN-8 Check Digit.



* Transmit EAN-13 Check Digits.
Scanner will transmit EAN-13 Check Digit.



Do Not Transmit EAN-13 Check Digit.
Scanner will not transmit EAN-13 Check Digit.

CODE FORMATTING (CONTINUED)

CODABAR FORMATTING



Transmit Codabar Start/Stop Characters.

Transmits Codabar's Start/stop characters before and after each bar code.



*** Do Not Transmit Codabar Start/Stop.**

Will not transmit Codabar's start/stop characters before and after each bar code.



Enable CLSI Editing.

Works only with 14 digit Codabar type lengths. This option will perform CLSI type editing before the information is transmitted to the host.



*** Do Not Enable CLSI Editing.**

This option will not perform CLSI type editing before the information is transmitted to the host.



Enable Codabar Mod-16 Check Digit.



*** Disable Codabar Mod-16 Check Digit.**



Enable Codabar "7-Check" Check Digit.



*** Disable Codabar "7-Check" Check Digit.**

CODE FORMATTING (CONTINUED)

CODABAR FORMATTING (CONTINUED)



* Transmit Codabar Check Digit.



Don't Transmit Codabar Check Digit.

CODE 39 FORMATTING



Transmit Mod 43 Check Digit on Code 39.

This feature works in conjunction with Mod 43 Check on code 39 option page 5. Both must be enabled for this feature to work.



* **Do Not Transmit Mod 43 Check Digit On Code 39.**

This option will not transmit Code 39's Mod 43 check character.



Transmit Code 39 Stop/Start Characters.

When chosen, the scanner transmits Code 39's start and stop characters before and after each bar code.



* **Do Not Transmit Code 39 Stop/Start Characters.**

When chosen, the scanner will not transmit Code 39's start and stop characters before and after each bar code.



Transmit an "A" (41H) prefix if Italian Pharmaceutical.



* **Do not Transmit an "A" (41H) prefix if Italian Pharmaceutical.**

CODE FORMATTING (CONTINUED)

CODE 11 FORMATTING



Transmit Code 11 Check Digit.

This bar code will transmit Code 11 check characters when used with Enabled Code 11 page 10.



*** Do Not Transmit Code 11 Check Digit.**

This bar code will not transmit Code 11 check characters.

TELEPEN



Enable convert Telepen ^L to E.



*** Disable Convert Telepen ^L to E.**

PLESSEY



Transmit UK Plessey Check Digit.

The scanner will transmit UK Plessey Check Digit characters and must be used with the UK Plessey option.



*** Do Not Transmit UK Plessey Check Digit.**

Will not transmit UK Plessey Check Digit characters.

CODE FORMATTING (CONTINUED)

PLESSEY (CONTINUED)



Enable UK Plessey Special Format.



Disable UK Plessey Special Format.



Transmit MSI Plessey Check Digit.

This option works in conjunction with one or both of the Enabled MSI Plessey Mod options on page 11.



*** Do Not Transmit MSI Plessey Check Digit.**

The scanner will not transit MSI Plessey's check digit characters.

2 OF 5 CODE FORMATTING



Transmit Mod 10 Check Digit on ITF.

With this option, the scanner transmits interleaved 2 of 5 (ITF) Mod 10 check character.



*** Do Not Transmit Mod 10 Check Digit on ITF.**

The scanner will not transmit interleaved 2 of 5 (ITF) Mod 10 check character. Works in conjunction with Mod 10 check on ITF. Both must be enabled for this feature to work.



Transmit Matrix 2 of 5 Check Digit.



*** Do Not Transmit Matrix 2 of 5 Check Digit.**

RS-232



* **Enable RS232 Mode.**

When enabled the scanner will work with RS-232 +/-12V serial output.

PARITY FEATURES

A parity bit is an extra data bit used to help catch data transmission errors. The scanner's parity must match the host's parity.



No Parity.



Odd Parity.

Select Odd Parity to set the parity bit to either a 1 or a 0 to ensure an odd number of bits are 1's.



* **Space Parity.**

Select Space Parity to set the parity bit always 0.



Even Parity.

Select Even Parity to set the parity bit to either a 1 or 0 to ensure an even number of bits are 1's.



Mark Parity.

Select Mark Parity to set the parity bit always 1.

BAUD RATE



115200 BAUD Rate.

(Not available with Voyager)



57600 BAUD Rate.

(Not available with Voyager)

RS-232 (CONTINUED)

BAUD RATE (CONTINUED)



38400 BAUD Rate.



19200 BAUD Rate.



14400 BAUD Rate.



***9600 BAUD Rate**



4800 BAUD Rate.



2400 BAUD Rate.



1200 BAUD Rate.



600 BAUD Rate.



300 BAUD Rate.

RS-232 (CONTINUED)

DATA/STOP BITS



8 Data Bits.

Number of data bits transmitted for each character.



*** 7 Data Bits.**



1 Stop Bit.



*** 2 Stop Bits.**

HARDWARE HANDSHAKING



Enable RTS/CTS Handshaking.

Output a Request to Send (RTS) signal and wait for a Clear to Send (CTS) signal before transmitting data.



*** Disable RTS/CTS Handshaking.**

Do not use RTS/CTS handshaking.



*** Character RTS/CTS.**

Activate/Deactivate RTS signal for each character.



Message RTS/CTS.

Activate RTS before sending the first character and leave it active until after the last character has been transmitted.

RS-232 (CONTINUED)

HARDWARE HANDSHAKING (CONTINUED)



Invert RTS Polarity (RSV1)

+12V = Inactive

-12V = Active



*** Standard RTS Polarity.**

Use standard RTS polarity

-12V = Inactive

+12V = Active



Invert CTS Polarity (RSV2).

+12V = Inactive, do not send

-12V = Active, OK to send



*** Standard CTS Polarity.**

-12V = Inactive, do not send

+12V = Active, OK to send



Activate RTS, Do Not Wait for CTS (RSV3).

Activate RTS for transmission but, do not wait for CTS to send.



*** Activate RTS, Wait for CTS.**

Wait for CTS after activating RTS.



Test CTS Not Present Before RTS (RSV4).

Do not activate RTS if CTS is already present.



*** Do Not Test for CTS Present Before RTS.**

Activate RTS without testing if CTS is already active.

RS-232 (CONTINUED)

HARDWARE HANDSHAKING (CONTINUED)



Enable DTR Support.

When enabled the scanner will stop scanning when the Data Terminal Ready (DTR) signal goes inactive.



*** Disable DTR Support.**



Enable RTS Counter Toggle.

The scanner will toggle the RTS line on a good decode.



*** Disable RTS Counter Toggle.**

SOFTWARE HANDSHAKING



Enable XON/XOFF Handshaking.

When enabled, the scanner will stop transmission whenever on XOFF (ASCII 13H) is received. Transmission will resume after an XON (ASCII 11H) is received.



*** Disable XON/XOFF Handshaking.**

The scanner will not test for XON/XOFF.



Enable ACK/NAK.

After transmitting data, wait for an ACK (06H) or a NAK (15H) response from the host. If ACK is received, complete the communications cycle and look for more bar codes. If NAK is received, retransmit the last set of bar code data and wait for ACK/NAK again.

RS-232 (CONTINUED)

SOFTWARE HANDSHAKING (CONTINUED)



- * **Disable ACK/NAK.**
Do not support ACK/NAK handshaking.



- * **Support BEL/CAN in ACK/NAK.**
When BEL (07H) is received, the scanner beeps 3 times and exits the communications loop. If a CAN (18H) is received, then the scanner will exit the communications loop, silently.



- * **Ignore BEL/CAN in ACK/NAK.**
Ignore BEL/CAN characters in communication loop.



- * **Enable 5 Retries on ACK/NAK Time Out.**
Allow up to 5 NAK retransmissions of the data before dropping out of the communications loop.



- * **Disable 5 Retries on ACK/NAK Time Out.**
Do not limit retransmission to 5 NAK cycles.

MISCELLANEOUS



- * **Enable French PC Term.**
When enabled, the scanner transmits PC type make/break scan codes instead of ASCII data characters. The scan codes match a WYSE French PC Term



- * **Disable French PC Term.**
Do not transmit in French PC Term mode.

KEYBOARD

ENABLE KEYBOARD EMULATION



Load Keyboard Wedge Defaults.

Loads default settings for keyboard wedge mode.



Enable Stand-Alone Keyboard Emulation.

Use this with special stand-alone models that are not cabled for an external keyboard. Scan this bar code to enable the Stand-Alone Mode. The scanner will send keyboard “power on” information and configure hardware to simulate a constant keyboard connection.



*** Enable Keyboard Wedge Emulation.**

Use this with an external keyboard. Transmit in wedge mode to allow standard PC keyboards to communicate when no bar code data is available.

COUNTRY/SCAN CODE TABLE SELECTS



*** USA Keyboard.**

Enable USA keyboard.



Switzerland Keyboard.

Enable Swiss keyboard.



Spain Keyboard.

Enable Spanish keyboard.

KEYBOARD (CONTINUED)

COUNTRY/SCAN CODE TABLE SELECTS (CONTINUED)



Italy Keyboard.
Enable Italian keyboard



Germany Keyboard.
Enable German keyboard.



France Keyboard.
Enable French keyboard.



UK Keyboard.
Enable UK keyboard.



Belgium Keyboard.
Enable Belgium keyboard



Japan Keyboard.
Enable Japanese keyboard.



IBM 4700 Financial Keyboard.
Enable IBM 4700 Financial keyboard



Sweden/Finland Keyboard
Enable Sweden/Finland Keyboard

KEYBOARD (CONTINUED)

KEYBOARD/SYSTEM TYPE



* **AT Keyboard.**

If using an AT computer, scan the above.
(Includes IBM PS/2 and compatible models 50, 55, 60, 80).



XT Keyboard.

If using on XT computer, scan the above.
Special firmware in Voyager.



PS/2 Keyboard.

Scan the above for PS/2 computer. (Includes IBM PC and compatible models 30, 70, 8556).



Enable Terminal Keyboard Emulation.



Enable XT Keyboard for Mode 1.

Special firmware in Voyager.



Enable XT Keyboard for Mode 2.

Special firmware in Voyager.

KEYBOARD (CONTINUED)

“DUMB” TERMINAL SELECTIONS

Note: The following terminals may require custom cables.



IBM Terminal Keyboards.



Reserved Terminal Keyboard #2.



Reserved Terminal Keyboard #3



Reserved Terminal Keyboard #4



Reserved Terminal Keyboard #5



Reserved Terminal Keyboard #6



Reserved Terminal Keyboard #7



Reserved Terminal Keyboard #8

KEYBOARD (CONTINUED)

SPECIAL KEYBOARD FEATURES



Transmit Make Code Only.
Not available on all models.



* **Transmit Make/Break Code.**
Not available on all models.



* **Transmit FOH Break Code.**
The scanner will transmit the FOH in the break-code sequence.



Do Not Transmit FOH Break Code.
The scanner will not transmit the FOH in the break-code sequence.



Transmit Cleanup Bit.
Use for certain NEC Computers.



* **Do Not Transmit Cleanup Bit.**



Enable Alt Mode.
When enabled, the scanner will duplicate this keyboard sequence: *Hold down Alt key: Type decimal number that corresponds to the appropriate character.*



* **Disable Alt Mode.**
Caution: If host software application uses the right Alt key as a "Hot" key, Alt mode must be disabled.

KEYBOARD (CONTINUED)

SPECIAL KEYBOARD FEATURES (CONTINUED)



Enable auto Detect Mode (AT/PS2).
Automatically detects caps lock status.



*** Disable Auto Detect Mode (AT/PS2)**
When disabled, the Caps Lock feature is not supported.



Enable Caps Lock (XT).



*** Disable Caps Lock (XT).**
When disabled, the Caps Lock feature is not supported.



Send Numbers as Keypad Data.
When enabled, all data is sent as if it has been entered on a keypad.



*** Send Numbers as Normal Data.**



Enable Reserved Feature.



*** Disable Reserved Feature.**

KEYBOARD (CONTINUED)

SPECIAL KEYBOARD FEATURES (CONTINUED)



* Use Extended ASCII To Send Extended Key Codes.

Use extended ASCII characters to send PC keyboard keys such as F1, F2, etc...



Use Extended ASCII Characters As Extended ASCII>

Transmit extended ASCII codes via Alt Mode.



* Character KB Inhibit.



Message KB Inhibit.



Enable Right Alt Key Sequencing.



Disable Right Alt Key Sequencing.



Enable LaCaixa Special Keyboard Prefix & Suffix scan codes.



* Disable LaCaixa Special Keyboard Prefix & Suffix scan codes.

KEYBOARD (CONTINUED)

INTERSCAN CODE DELAYS



*** InterScan Code Delay 800 msec.**

The time specified represents the amount of time between individual 11 bit-scan codes. This parameter may need to be adjusted for operation with certain PC keyboard BIOS.



InterScan Code Delay 7.5 msec.

This time specified represents the amount of time between individual 9 bit-scan codes. This parameter may need to be adjusted for operation with certain PC keyboard BIOS.



InterScan Code Delay 15 msec.

The time specified represents the amount of time between individual 11 bit-scan codes. This parameter may need to be adjusted for operation with certain PC keyboard BIOS.



~ Variable InterScan Code Delay msec.

Refer to *Multi-Code Method* on page 2.
Sets value in 100 microsecond increments.

CONTROL SETS

In general, standard bar code symbologies will only encode the ASCII character set. Function keys, arrow keys and many other “extended” keys on an IBM compatible keyboard do not translate to ASCII characters. One method of “bar coding” the extended keys is to substitute the extended key codes when a specific ASCII control character is found in the bar code stream. The Control Sets are specific translations of the ASCII (HEX) set.

Control Set #1



Enable Control Set #1.



*** Disable Control Set #1.**

KEYBOARD (CONTINUED)

Control Set #1

ASCII (HEX)	ASCII Control	Extended Key
00H	Null	Numeric Keypad + (Plus)
01H	SOH	Num Lock
02H	STX	Down Arrow
03H	ETX	Numeric Keypad- (Minus)
04H	EOT	Insert
05h	ENQ	Delete
06H	ACK	System Request
07H	BEL	➔ (Right Arrow)
08H	BS	➔ (Left Arrow)
09H	TAB	Tab
0AH	LF	Caps Lock
0BH	VT	Shift Tab
0CH	FF	Left Alt
0DH	CR	Enter
0EH	SO	Left Control
0FH	SI	Up Arrow
10H	DLE	F1
11H	DC1	F2
12H	DC2	F3
13H	DC3	F4
14H	DC4	F5
15H	NAK	F6
16H	SYN	F7
17H	ETB	F8
18H	CAN	F9
19H	EM	F10
1AH	SUB	Home
1BH	ESC	Esc
1CH	FS	Page Up
1DH	GS	Page Down
1EH	RS	Print Screen
1FH	US	End

OCIA



Enable OCIA Mode.

Select this option if communications requires OCIA (Optically Coupled Interface Adapter). The host clocks this serial interface.



Load OCIA Defaults.



Enable DTS/Siemens.



*** Enable DTS/Nixdorf.**



Enable NCR-S.



Enable NCR-F



*** Transmit character count with non-UPC codes while transmitting in OCIA NCR-S mode.**



Do not Transmit character count with non-UPC codes while transmitting in OCIA NCR-S mode.

LIGHT PEN PARAMETERS



Enable Light Pen Mode.

Select this option if the scanner will be used in place of a light pen. It provides light pen emulation of each bar code scanned.



*** Bars High.**



Spaces High.



Transmit as Code 39.

All bar codes will be decoded then transmitted as Code 39 bar codes.



*** Transmit as Scanned.**

All bar codes will be decoded and transmitted in that symbology.



Poll Light Pen Source.

When chosen, the scanner waits for an active source voltage before transmitting data.



*** Do Not Poll Light Pen Source.**

When chosen, the scanner will not wait for an active source voltage before transmitting data.



Enable Inverted IDLE/Extra Toggle.

When enabled, the scanner beeps and toggles the light pen data line with an extra data pulse to condition the decoder.

LIGHT PEN PARAMETERS (CONTINUED)



* **Disable Inverted IDLE/Extra Toggle.**



Enable Pre-Transmit Toggle of RTS Line



* **Disable Pre-Transmit Toggle of RTS Line**

SET NARROW ELEMENT WIDTH



10x Narrow Element Border.

This bar code allows the transmission of Light Pen/Wand emulation using a 10x border.



* **50x Narrow Element Border.**

This bar code allows the transmission of Light Pen/Wand emulation using a 50x border.



* **1 ms Narrow Element**

This option allows the transmission of Light Pen/Wand emulation at 1ms Narrow Element width.



60 μ s Narrow Element Width.

This transmits at 60 μ s Narrow element width.



100 μ s Narrow Element Width.

This transmits at 100 μ s Narrow element width.

LIGHT PEN PARAMETERS (CONTINUED)

SET NARROW ELEMENT WIDTH (CONTINUED)



500 µs Narrow Element Width.

This transmits at 500 µs Narrow element width.



~ Variable Narrow Element Width.

Sets the minimum x-dimension in 6 µs increments. Scan this code followed by a 3-digit code byte sequence found (pages 90-97). Refer to *Multi-Code Method* on page 2.

MS9520/9540-00 LASER EMULATION MODE

ENABLE HANDHELD LASER EMULATION MODE

The MS9520-00 and MS9540-00 leave the factory with Laser Emulation interface enabled.

If you recall defaults while re-configuring your scanner, scan the following barcode to re-enable the Laser Emulation interface. The scanner you are using must be labeled as an MS9520-00 or MS9540-00 to support this feature.

Enable HH Laser Emulation



IBM 46xx CONFIGURATION

IBM PORT



Enable IBM 46xx Communication.

Select this option for IBM 46xx SIOC/RS485 communications. Not all scanners support this interface. The correct interface board is required.



Load 46xx IBM Defaults.

Load default format settings for the IBM 46xx systems.



IBM Port 17B 3687-2 In Counter.



IBM Port 5B 1520 HH Laser.



*** IBM Port 9B 4500 CCD HH BCR1.**



IBM Port 9B 4501 CCD HH BCR2



*** Disable CTS select of IBM 46xx vs RS232**



**Enable IBM 46xx transmit when
CTS = -12 Volt & RS232 transmit when
CTS = +12 Volt**

IBM 46XX CONFIGURATION (CONTINUED)

IBM RESERVED CODES



IBM Reserved #1.



IBM Reserved #2.



IBM Reserved #3.



IBM Reserved #5.

USB


‡ **When used with the MS9500 series**, the following codes will enable communication with an MX009 converter cable.

OR

‡ **If used with an MS5145**, these codes will enable direct USB communication without the use of an MX009 converter cable.




**Enable
USB Interface ‡**

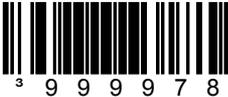

**Enable
Low Speed USB Defaults ‡**



**Enable
MX009-Full Speed RS232 Communication with
Full Speed IBM OEM USB.**

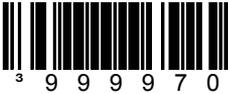

**Enable
Integrated IBM Full Speed OEM USB.**



**Enable
RS232 Transmit to MX009-Full Speed for
Scanners with Integrated Low Speed USB.**



**Disable
RS232 Transmit to MX009-Full Speed for
Scanners with Integrated Low Speed USB.**

USB



Enable Barcode ID



Disable Barcode ID



Enable USB Reserve Code #1



Disable USB Reserve Code #1



Enable USB Reserve Code #2



Disable USB Reserve Code #2

CODE BYTES USAGE

Note: Use Configurable Prefixes, Symbol Length and other features that use these Code Bytes for configuration, require that the scanner be in Configuration Mode. Scan the *Enter/Exit Configuration Mode* bar code before starting the configuration cycle. Single Code Configuration Mode does not work for these *Multi-Code* sequences.

Example #1

User configurable prefix/suffix characters (section E) can be saved into the scanner by scanning the 3 digit decimal equivalent of the ASCII character into the appropriate character location with the code byte bar code.

Add an Asterisk (*) as a Prefix

1. Enter/Exit (3 beeps)
2. Configurable Prefix #1 (1 beep)
3. Code Byte #0 (1 beep)
4. Code Byte #4 (2 beeps)
5. Code Byte #2 (3 Beeps)
6. Enter/Exit (3 Beeps)

CODE BYTES 0-9



Code Byte 0.

Code Byte 5.



Code Byte 1.

Code Byte 6.



Code Byte 2.

Code Byte 7.



Code Byte 3.

Code Byte 8.



Code Byte 4.

Code Byte 9.



CODE BYTES USAGE (CONTINUED)

RESERVED CODES



~ **Enable Reserved Code.** Contact Metrologic for information about this feature.



~ **Disable Reserved Code.**

CODE TYPE TABLE

Code Byte	Code Types
004	UPC-A
002	UPC-E
003	EAN-8
005	EAN-13
080	Code 39
081	Codabar
082	Interleaved 2 of 5
083	Code 128
084	Code 93
091	MSI Plessey
092	Code 11
093	Airline 2 of 5 (15 digits)
094	Matrix 2 of 5
095	Telepen
096	UK Plessey
099	TRI-OPTIC
098	Standard 2 of 5
097	Airline (13 digits)

CODE BYTES USAGE (CONTINUED)

ASCII REFERENCE TABLE

HEX Value	Decimal Value/ Code Byte Value	Character	Control Keyboard Eqv
00	000	NUL	@
01	001	SOH	A
02	002	STX	B
03	003	ETX	C
04	004	EOT	D
05	005	ENQ	E
06	006	ACK	F
07	007	BEL	G
08	008	BS	H
09	009	HT	I
0A	010	LF	J
0B	011	VT	K
0C	012	FF	L
0D	013	CR	M
0E	014	SO	N
0F	015	SI	O
10	016	DLE	P
11	017	DC1	Q
12	018	DC2	R
13	019	DC3	S
14	020	DC4	T
15	021	NAK	U
16	022	SYN	V
17	023	ETB	W
18	024	CAN	X
19	025	EM	Y
1A	026	SUB	Z
1B	027	ESC	[
1C	028	FS	\

CODE BYTES USAGE (CONTINUED)

ASCII REFERENCE TABLE (CONTINUED)

HEX Value	Decimal Value/ Code Byte Value	Character	Control Keyboard Eqv
1D	029	GS	^
1E	030	RS	_
1F	031	US	space,blank
20	032	SP	
21	033	!	
22	034	"	
23	035	#	
24	036	\$	
25	037	%	
26	038	&	
27	039	'	apostrophe
28	040	(
29	041)	
2A	042	*	
2B	043	+	
2C	044	,	comma
2D	045	-	minus
2E	046	.	period
2F	047	/	
30	048	0	number zero
31	049	1	number one
32	050	2	
33	051	3	
34	052	4	
35	053	5	
36	054	6	
37	055	7	
38	056	8	
39	057	9	
3A	058	:	
3B	059	;	

CODE BYTES USAGE (CONTINUED)

ASCII REFERENCE TABLE (CONTINUED)

HEX Value	Decimal Value/ Code Byte Value	Character	Control Keyboard Eqv
3C	060	<	less than
3D	061	+	
3E	062	>	greater than
3F	063	?	
40	064	@	shift P
41	065	A	
42	066	B	
43	067	C	
44	068	D	
45	069	E	
46	070	F	
47	071	G	
48	072	H	
49	073	I	letter I
4A	074	J	
4B	075	K	
4C	076	L	
4D	077	M	
4E	078	N	
4F	079	O	letter O
50	080	P	
51	081	Q	
52	082	R	
53	083	S	
54	084	T	
55	085	U	
56	086	V	
57	087	W	
58	088	X	
59	089	Y	

CODE BYTES USAGE (CONTINUED)

ASCII REFERENCE TABLE (CONTINUED)

HEX Value	Decimal Value/ Code Byte Value	Character	Control Keyboard Eqv
5A	090	Z	
5B	091	[shift K
5C	092	\	shift L
5D	093]	shift M
5E	094	^	à,shift N
5F	095	_	»», shift O, underscore
60	096	`	accent grave
61	097	a	
62	098	b	
63	099	c	
64	100	d	
65	101	e	
66	102	f	
67	103	g	
68	104	h	
69	105	i	
6A	106	j	
6B	107	k	
6C	108	l	
6D	109	m	
6E	110	n	
6F	111	o	
70	112	p	
71	113	q	
72	114	r	
73	115	s	
74	116	t	
75	117	u	
76	118	v	
77	119	w	
78	120	x	

CODE BYTES USAGE (CONTINUED)

ASCII REFERENCE TABLE (CONTINUED)

HEX Value	Decimal Value/ Code Byte Value	Character	Control Keyboard Eqv
79	121	y	
7A	122	z	
7B	123	{	
7C	124		vertical slash
7D	125	}	alt mode
7E	126	~	(alt mode)
7F	127	DEL	delete, rubout

EXTENDED KEY CODE REFERENCE TABLE

Key	At Scan Code	PS2 Scan Code	3151	Prefix/Suffix Value Hex = Decimal
↑	75H	48H	63H	80H = 128
↓	72H	50H	60H	81H = 129
→	74H	4DH	6AH	82H = 130
←	6BH	4BH	61H	83H = 131
Insert	70H	52H	67H	84H = 132
Delete	71H	53H	64H	85H = 133
Home	6CH	47H	6EH	86H = 134
End	69H	4FH	00H	87H = 135
Page Up	7DH	49H	00H	88H = 136
Page Down	7AH	51H	00H	89H = 137
Right Alt	11H	38H	00H	8AH = 138
Right Ctrl	14H	1DH	39H	8BH = 139
Reserved	00H	00H	00H	8CH = 140
Reserved	00H	00H	00H	8DH = 141
Numeric Keypad Enter	5AH	1CH	79H	8EH = 142
Numeric Keypad/	4AH	35H	00H	8FH = 143
F1	05H	3BH	07H	90H = 144
F2	06H	3CH	0FH	91H = 145
F3	04H	3DH	17H	92H = 146
F4	0CH	3EH	1FH	93H = 147

CODE BYTES USAGE (CONTINUED)

EXTENDED KEY CODE REFERENCE TABLE (CONTINUED)

Key	At Scan Code	PS2 Scan Code	3151	Prefix/Suffix Value Hex = Decimal
F5	03H	3FH	27H	94H = 148
F6	0BH	40H	2FH	95H = 149
F7	83H	41H	37H	96H = 150
F8	0AH	42H	3FH	97H = 151
F9	01H	43H	47H	98H = 152
F10	09H	44H	4FH	99H = 153
F11	78H	57H	56H	9AH = 154
F12	07H	58H	5EH	9BH = 155
Numeric +	79H	4EH	00H	9CH = 156
Numeric -	7BH	4AH	7CH	9DH = 157
Numeric *	7CH	37H	00H	9EH = 158
Caps Lock	58H	3AH	14H	9FH = 159
Num Lock	77H	45H	00H	A0H = 160
Left alt	11H	38H	00H	A1H = 161
Left Ctrl	14H	1DH	11H	A2H = 162
Left Shift	12H	2AH	12H	A3H = 163
Right Shift	59H	36H	59H	A4H = 164
Print Screen	Multiple	00H	00H	A5H = 165
Tab	ODH	OFH	0DH	A6H = 166
Shift Tab	8DH	8FH	65H	A7H = 167
Enter	5AH	1CH	5AH	A8H = 168
ESC	76H	01H	08H	A9H = 169
Left ALT Make	11H	36H	00H	AAH = 170
Left ALT Break	11H	B6H	00H	ABH = 171
Left CTRL Make	14H	1DH	00H	ACH = 172
Left CTRL Break	14H	9DH	00H	ADH = 173
*Left ALT + 1 character	11H	36H	00H	AEH = 174
*Left Ctrl + 1 character	14H	1DH	00H	AFH = 175

*Example:

1st Configurable Prefix = 174

2nd Configurable Prefix = 065

Scanner will transmit <left ALT Make> "A" <Left ALT Break>

MISCELLANEOUS FEATURES

CUSTOM DEFAULTS

Metrologic manufactures several scanners for OEM applications. These scanners may use a different set of defaults than Metrologic factory defaults. Scanning the bar code will reset the default table to Metrologic defaults.



Enable Factory Defaults.

Scan this code followed by "Recall Defaults" code to enable and load Metrologic Factory Defaults.



Recall Defaults.



Ruby Verifone Defaults.

Scan this code followed by "Recall Defaults" code to enable and load Ruby Verifone Defaults.



RCH.

Scan this code followed by "Recall Defaults" code to enable and load RCH Defaults.



Sanyo.

Scan this code followed by "Recall Defaults" code to enable and load Sanyo Defaults.



Gilbarco.

Scan this code followed by "Recall Defaults" code to enable and load Gilbarco Defaults.



ALT Defaults.

Scan this code followed by "Recall Defaults" code to enable and load Alt Defaults.



LaCaixa Custom Keyboard Defaults

Scan this code followed by "Recall Defaults" code to enable and load LaCaixa Defaults.

MISCELLANEOUS FEATURES

SERIAL PROGRAM MODE

For Serial Program Mode, all commands must be framed by an STX (02 Hex) and ETX (03 Hex).

To recall defaults:

1. Transmit <STX>999999<ETX> through the Serial Port. This will put the scanner in serial program mode. Scanning will be suspended and the scanner will respond with an ACK (06 Hex).
2. Transmit <STX>999998<ETX> through the Serial Port. This is the Recall Defaults bar code in the MetroSelect guide. The scanner will respond with an ACK (06 Hex).
3. Transmit <STX>999999<ETX> through the Serial Port. This will cause the scanner to exit program mode and save the new settings. The scanner will beep 3 times and send an ACK (06 Hex).

If at anytime, the scanner cannot recognize a command, it will respond with a NAK (15 Hex). Please refer to the Installation and User's Guide of the scanner for a complete description of Serial Program Mode.

December 2002

Printed in the USA



00 - 02544B